

■ GEBERIT




GEBERIT AQUACLEAN SELA

---


# HOUSEKEEPER AND CLEANING GUIDE

---

### The device at a glance

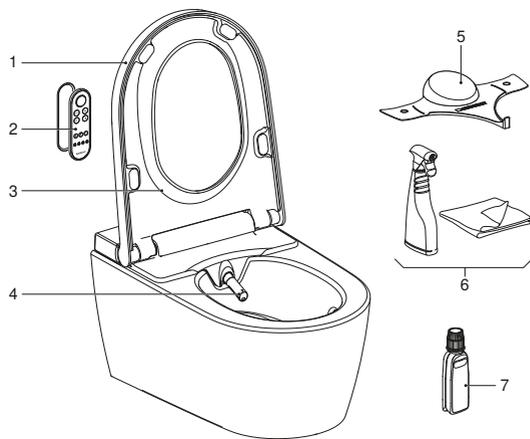


- 1 WC lid
- 2 Remote control with magnetic wall-mounted holder
- 3 WC seat ring
- 4 Spray arm with spray nozzle and Lady shower nozzle
- 5 Spray shield
- 6 Geberit AquaClean cleaning set (art. no. 242.547.00.1)
- 7 Geberit AquaClean descaling agent (art. no. 147.040.00.1)

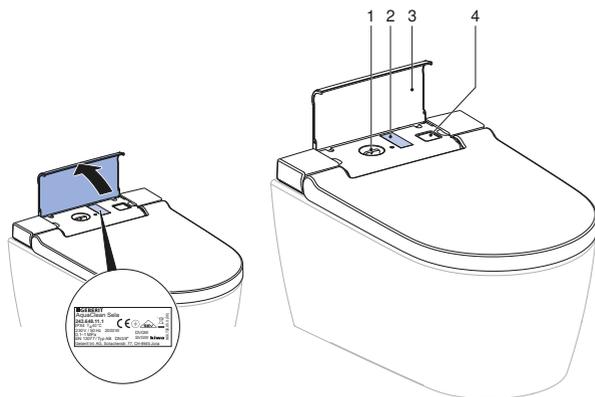

- 1 Filling opening with plug for Geberit AquaClean descaling agent
- 2 Specification plate with serial number
- 3 Design cover
- 4 Power switch

### Rear side of the remote control

You can access system settings and additional functions from the rear side of the remote control.

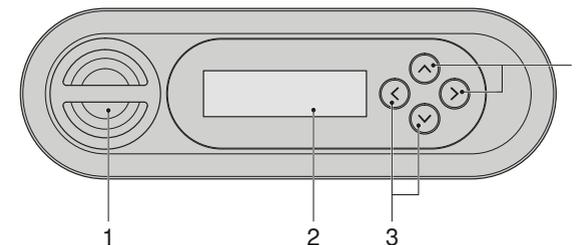

- 1 Battery compartment
- 2 LCD display
- 3 <up>/<down>, <left>/<right> arrow keys

**i** The remote control has a battery life of several years. The battery can be replaced if the remote control fails.

### Status LED on the orientation light

The LED on the orientation light informs you of the current device status. The current condition of the device is therefore visible.

LED	Description
Flashes blue	The device initialises after switching on.
Flashes blue/red	The device must be descaled. → See "Descaling the device", page 31
Flashes red	A malfunction message is pending. ▶ If [Error message] is displayed on the remote control/ smartphone: contact customer service.
Flashes orange	<ul style="list-style-type: none"> <li>• The device is now descaling. It is not possible to use the shower toilet for the duration of the descaling procedure.</li> <li>• Water replacement is being carried out. → See "Automatic water replacement", page 28</li> </ul>

## Cleaning and descaling the device

### General cleaning recommendations

Cleaning the shower toilet at the recommended cleaning intervals will ensure that it functions properly. The shower toilet must only be cleaned using suitable cleaning agents and cleaning equipment. → See "Suitable cleaning agents and cleaning equipment", page 26.

Cleaning interval	Cleaning activity
Daily	<ul style="list-style-type: none"> <li>▶ Remove water drops with a soft, lint-free cloth to avoid limescale stains.</li> </ul>
Weekly	<ul style="list-style-type: none"> <li>▶ Clean all surfaces and corners thoroughly. → See "Cleaning the WC seat and housing", page 29.</li> <li>▶ Test spray nozzle and clean if required. → See "Cleaning the spray nozzle", page 30.</li> <li>▶ Rinse the spray nozzle under running water to remove foreign substances.</li> </ul>
Monthly	<ul style="list-style-type: none"> <li>▶ Clean the WC ceramic appliance with Geberit AquaClean cleaning agent. → See "Cleaning the flushing area of the WC ceramic appliance", page 28.</li> </ul>

### Suitable cleaning agents and cleaning equipment

#### ATTENTION

##### Aggressive descaling agents

Inappropriate descaling agents can damage the device.

- ▶ Only use Geberit AquaClean descaling agent for descaling.

#### ATTENTION

##### Aggressive and scouring cleaning agents

Cleaning using aggressive and scouring cleaning agents can cause surface damage.

- ▶ Use Geberit AquaClean cleaning agents.

Using the Geberit AquaClean cleaning set is recommended, as this set includes a ready-made cleaning agent that is ideal for cleaning all Geberit AquaClean surfaces.

Recommended properties of suitable cleaning agents and cleaning equipment for best cleaning results:

Symbol	Properties of suitable cleaning agents
	Skin-friendly
	Cleaning agents are permitted to have a low acid content, e.g. heavily diluted citric acid
	Low-foaming
	Liquid
	Water-dilutable

Symbol	Suitable cleaning equipment
	Soft, fine-pored sponges
	Lint-free, soft cloths which are free of dust
	Toilet brush

## Automatic water replacement

If the shower toilet has not been used for more than 2 months, the device is rinsed with fresh water after it is switched on. This ensures optimum shower water quality before usage.

## Targeted disinfection

Disinfection is only required if there is a definite risk of infection as a result of germs. Otherwise, keep to the recommended cleaning intervals and carry out the specified cleaning activities. → See General cleaning recommendations.

## ATTENTION

### Aggressive disinfectants

Disinfection using aggressive disinfectants can cause surface damage.

- ▶ Only use alcohol-based disinfectants that are also suitable for hand and skin disinfection.
- ▶ Observe the safety notes from the manufacturer when handling hazardous substances.

Type of disinfection	Disinfection procedure
<b>Wet wipe disinfection</b> For use on smooth surfaces that can be rubbed	<ul style="list-style-type: none"> <li>▶ Moisten all surfaces with disinfectant.</li> <li>▶ Allow the disinfectant to take effect according to the manufacturer information.</li> <li>▶ Then rub the surfaces with single-use towels.</li> </ul>

## Caring for and cleaning smooth surfaces

All smooth surfaces can be cleaned hygienically with water and a mild, liquid cleaning agent that is kind to the skin.

- i** Aggressive and scouring cleaning agents can damage the surface. Only use mild, liquid cleaning agents that are kind to the skin. The Geberit AquaClean cleaning set (art. no. 242.547.00.1) includes a ready-made cleaning agent that is optimal for cleaning all Geberit AquaClean surfaces.


## Cleaning the flushing area of the WC ceramic appliance

- 1** Spray the WC ceramic appliance with Geberit AquaClean cleaning agent and allow the cleaning agent a few minutes to take effect.
- 2** Afterwards, rinse the WC ceramic appliance with water.
- 3** Remove stubborn stains with a toilet brush.

## Cleaning the WC seat and housing


- i** Be careful not to scratch the surface of the WC seat. Always place the components on a soft, non-scratching underlay.

- 1** Lift the WC seat and remove it from the hinges at an angle of 85°.
  - ✓ The WC seat is very easy to remove at the correct angle.

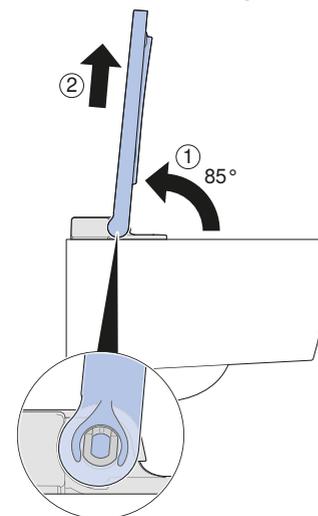

- 2** Spray the surfaces with Geberit AquaClean cleaning agent.
- 3** Wipe the surfaces with a soft, lint-free, damp cloth.
- 4** Then dry the surfaces with a soft, lint-free cloth.


- 5** Insert the WC seat into the hinges at an angle of 85°.
  - ✓ The WC seat must be positioned vertically relative to the WC ceramic appliance.

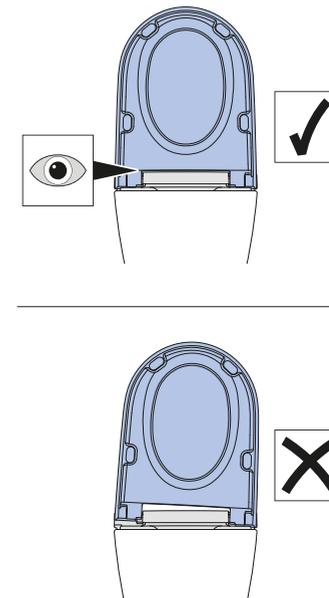

## Cleaning the spray nozzle


- i** For cleaning, use a soft, lint-free cloth.
- Geberit AquaClean cleaning agent is particularly suitable for all surfaces of the device.

- 1 Open the WC lid.
- 2 Lift the WC seat ring.
- 3 Press the <Shower> and <+> buttons at the same time.

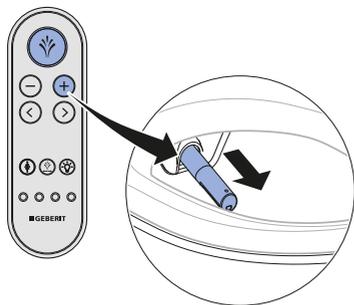

✓ The spray arm extends fully.

- 4 Pull out the spray nozzle for cleaning and descaling.

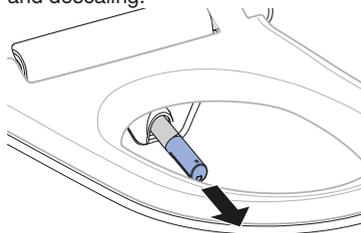


- 5 Spray the spray nozzle with Geberit AquaClean cleaning agent. Then rinse the spray nozzle with water.

- 6 Replace the spray nozzle if it can no longer be completely cleaned and descaled.

- 7 Dry the spray nozzle carefully before re-assembling and re-fitting.

- 8 Press the <Shower> button.

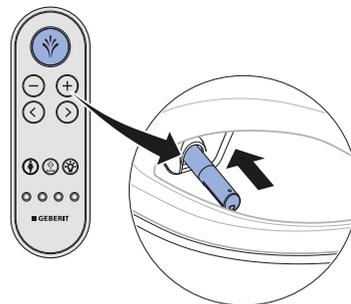

✓ The spray arm retracts fully.

### Result

- ✓ The cleaning procedure is now complete.

## Descaling the device

Information on descaling:

- during the descaling procedure, you can continue to use the device without the shower toilet functions.
- The descaling procedure lasts up to 40 minutes. During this time, the orientation light flashes orange and you can see the descaling status on the display/smartphone. As soon as the light stops flashing, the spray functionality is ready for operation again.

### ATTENTION

#### Aggressive descaling agents

Inappropriate descaling agents can damage the device.


- ▶ Only use Geberit AquaClean descaling agent for descaling.

- i** The descaling procedure should not be cancelled after filling the descaling agent because it would otherwise be flushed away unused. The display shows [Device is flushing...].


#### Prerequisite

- The status LED on the orientation light flashes blue-red.
- At the touch of a button, the display on the rear of the remote control shows [Descale device now] or [Descale device now, device blocked].
- The spray arm must be fully retracted.
- The WC lid is closed.


- 1 Open the design cover.

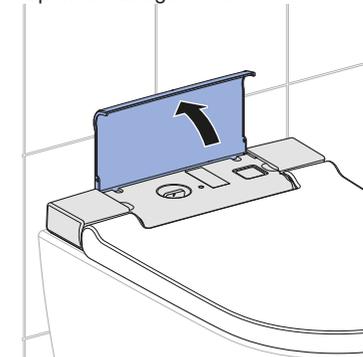


- 2 Remove the plug.

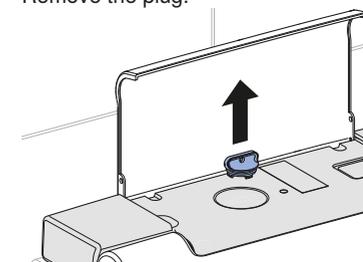

 
- 3 Launch the [Care and maintenance] main menu using the buttons on the rear side of the remote control.



 
- 4 Use the <down> arrow key to select the [Descale device now?] menu item.



 
**5** Use the arrow keys to select <yes>.  
 ✓ The display shows



 
✓ Wait until the device is ready. The display shows



**6** Pour a bottle (125 ml) of Geberit AquaClean descaling agent into the filling opening.

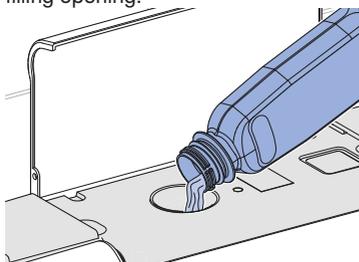


**7** Re-insert the plug.

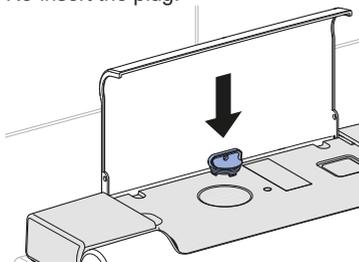

**8** Remove splashes of descaling agent immediately with a damp cloth.


**9** Close the design cover.

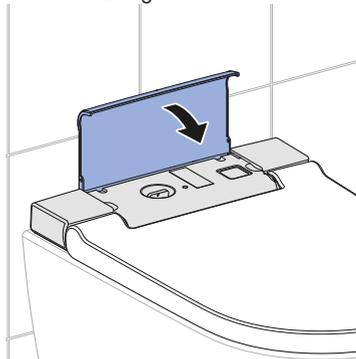

**10** Use the arrow key to start the descaling procedure.



 ✓ A status message appears on the display which shows the duration of the descaling procedure.



✓ The orientation light flashes orange until the descaling procedure is complete.

### Device descaling message

During installation, the device was configured for the local water hardness in accordance with the following table. This adaptation prevents unnecessary descaling procedures and helps protect the environment. Nevertheless, regular descaling of the device is required.

Area	°fH	°dH	°eH
soft	≤ 15	≤ 8	≤ 11
medium	15–25	8–14	11–18
hard	> 25	> 14	> 18

The following table helps you to identify descaling messages and to carry out the necessary fault clearance for each message.

Frequency	Message	Fault clearance
Regular descaling: at least once a year	<ul style="list-style-type: none"> <li>The orientation light LED flashes blue/red.</li> <li>The display shows [Descale device now].</li> </ul>	<ul style="list-style-type: none"> <li>▶ Perform descaling. → See "Descaling the device", page 31.</li> </ul>
Locked device: multiple rejected descaling requests	<ul style="list-style-type: none"> <li>The orientation light LED flashes blue/red.</li> <li>The display shows [Descale device now, device locked].</li> </ul>	<p><b>Prerequisite</b></p> <ul style="list-style-type: none"> <li>– A shower procedure is no longer possible without descaling.</li> <li>▶ Perform descaling. → See "Descaling the device", page 31.</li> </ul>





